



INSTALLATION INSTRUCTIONS


INSTALL POSTS

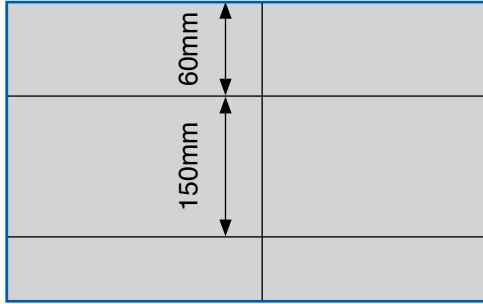

1. Mark a level line about 60mm down from the top edge.
2. Mark a second line about 150mm down from the first line.
3. Mark out post centres and drill holes.

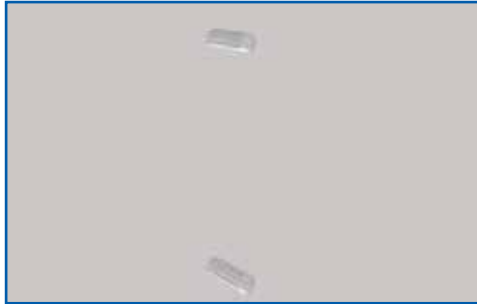

4. Insert threaded rods.

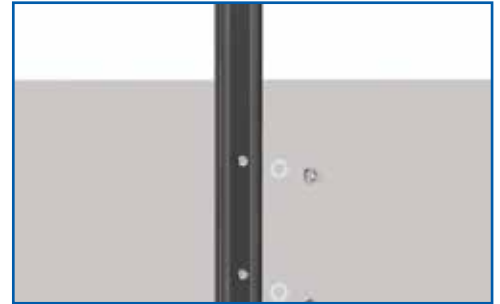


5. Install post and tighten washers & nut.


FITTING GLASS



1. Fit infill and plastic packing block.

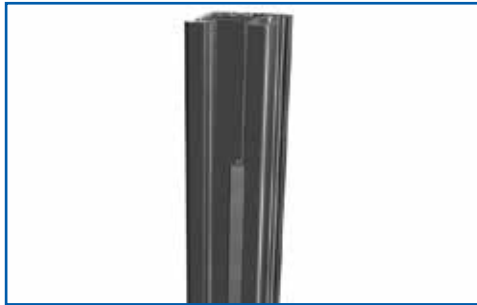

2. Fit captive rubber on the outside of the post.

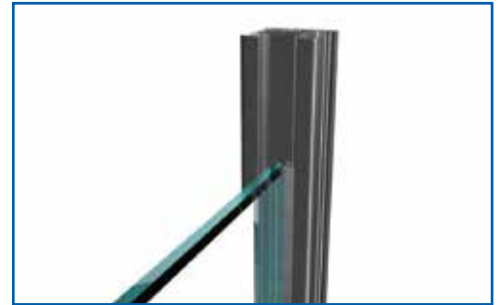


3. Slide glass in from the top.



4. Fit packer rubber (roller assisted, spray soapy water as lubricant).



5. Fit the plastic packing block and infill on the top of glass.

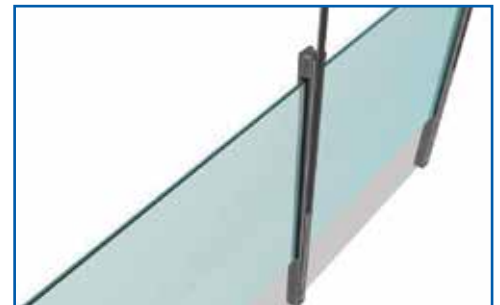

6. Fit side cover in the post.


FITTING HANDRAIL



1. Place under cap in position and use drilling jig to mark holes.




2. Drill holes.

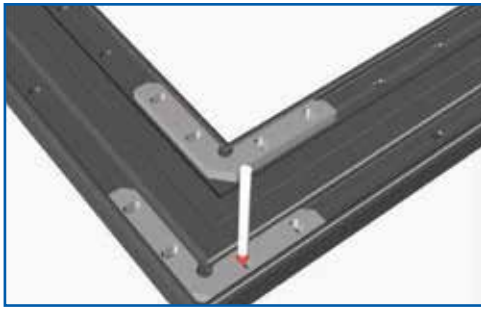


4. Position connector on under cap.




5. Drill holes.

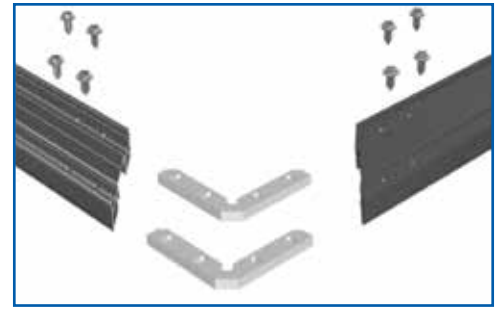


6. Screw down.

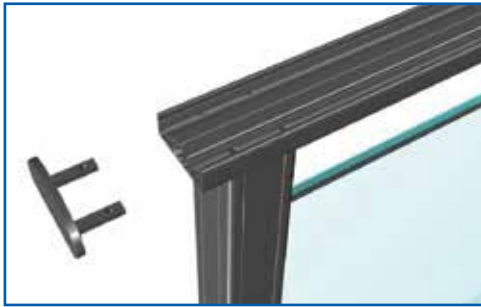

7. Fix end cap to the end of handrail.

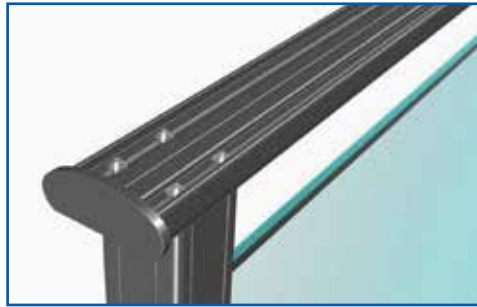

8. Place under cap back and screw down.

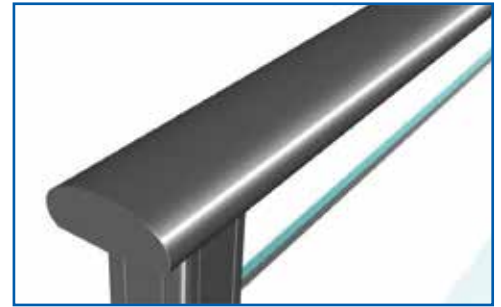

9. Slide handrail on, push down to clip into place.

FULL VIEW AFTER INSTALLATION



Whilst every effort has been made to ensure the accuracy of the information supplied. F.H. Brundle cannot be held responsible for any errors or omissions. This product must only be employed for its original intended use. Any other use is wrong and potentially dangerous. Installation must be carried out in full compliance with current regulations. F.H. Brundle cannot be held liable for any damages resulting from wrongful, erroneous or negligent use.

Mar 2019